



X111

+ X005 / X003

ISTRUZIONI DI MONTAGGIO - NOTICE DE MONTAGE - ASSEMBLY INSTRUCTIONS








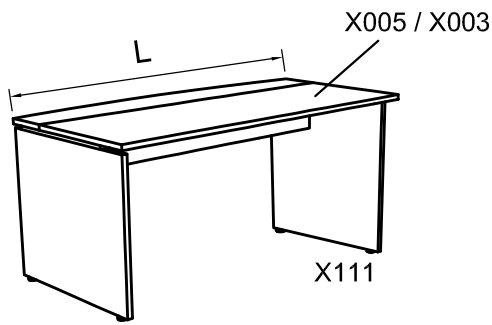


Top L
X005 = 180 cm
X003 = 160 cm



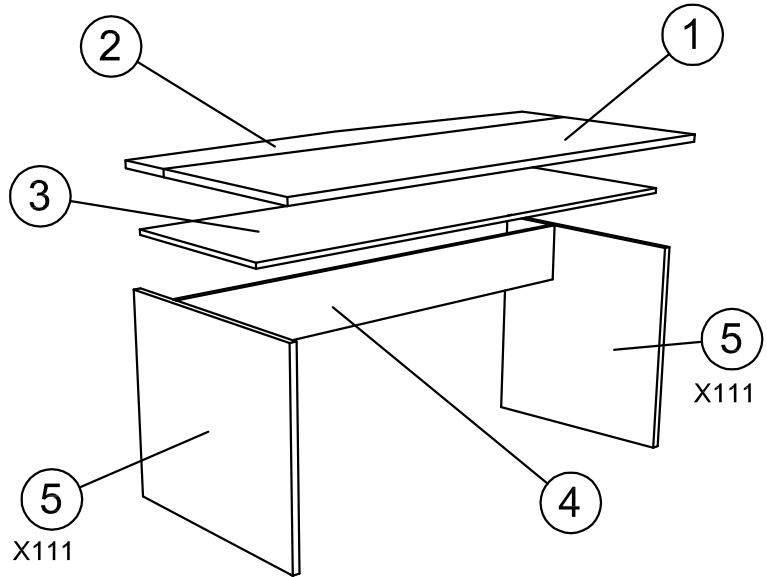


X003/X005 : (1) (2) (3) (4)


utensili necessari
outils nécessaires
tools required

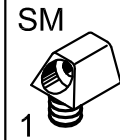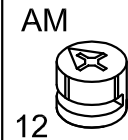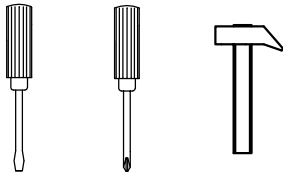

NOTES

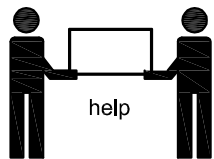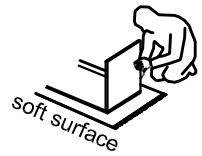


1



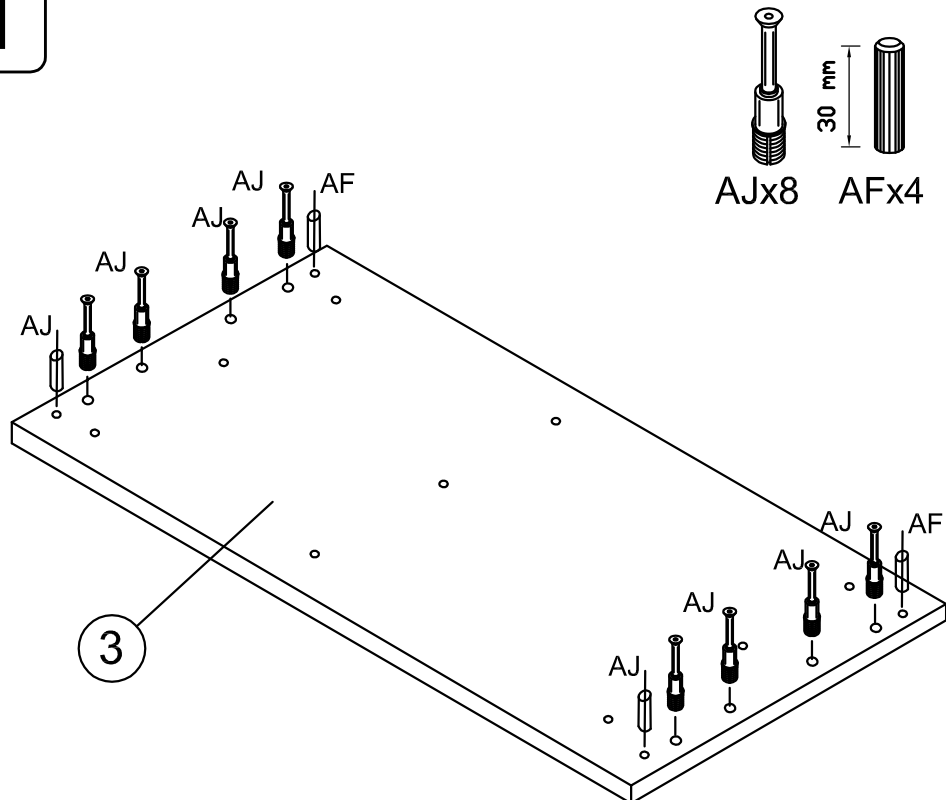


2

X111



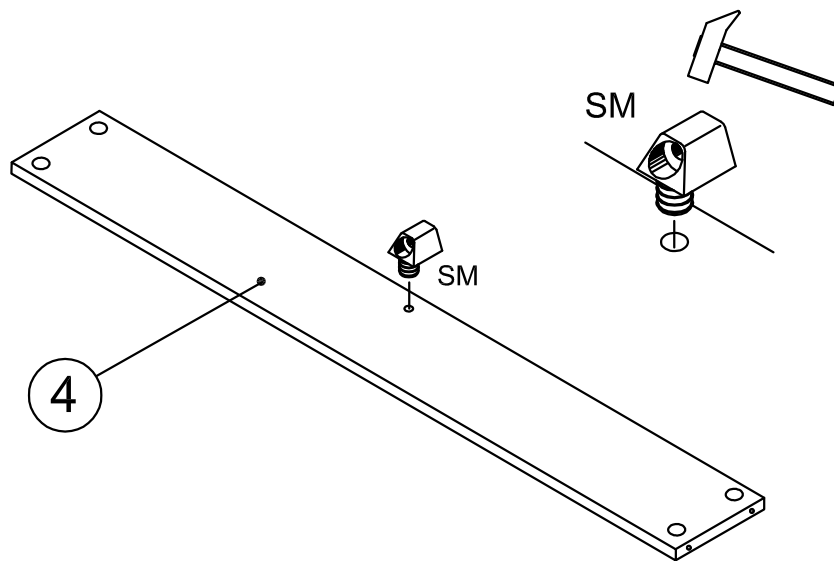


3

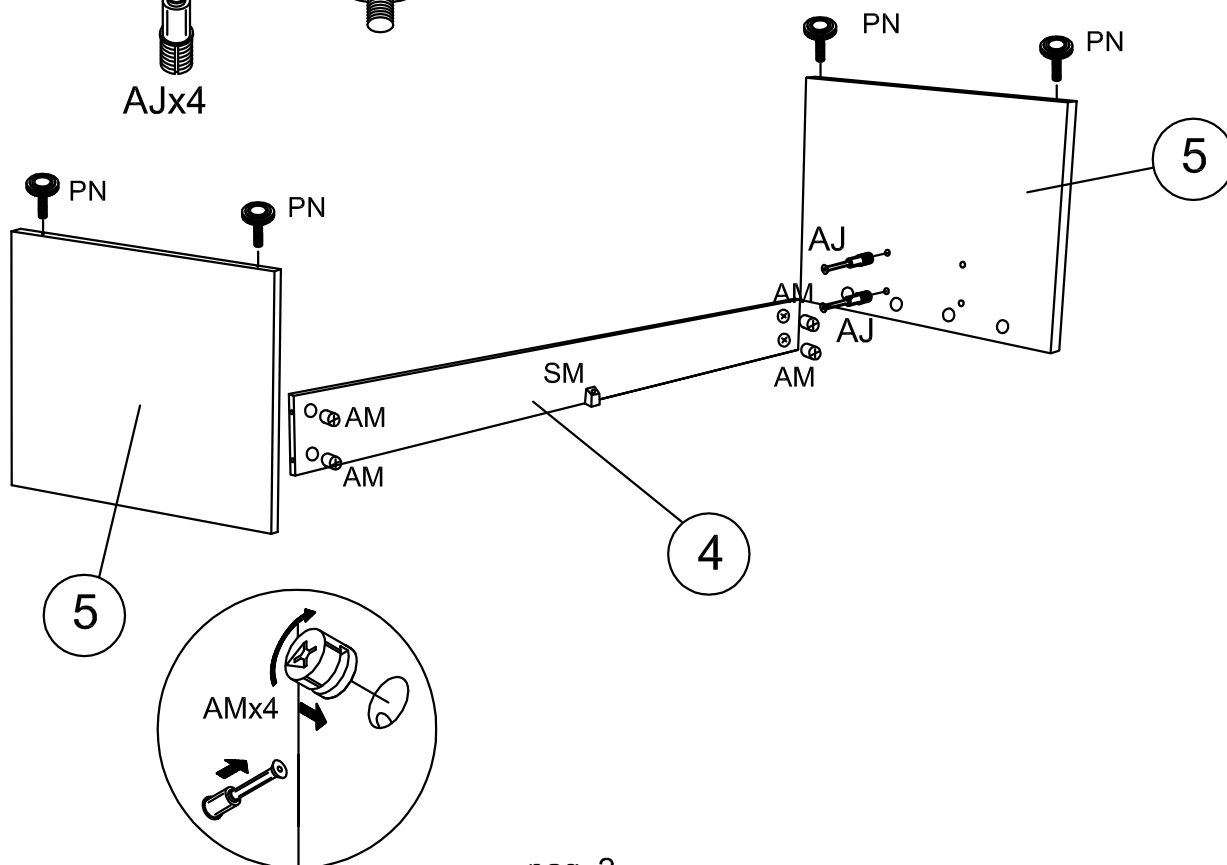


4

X111

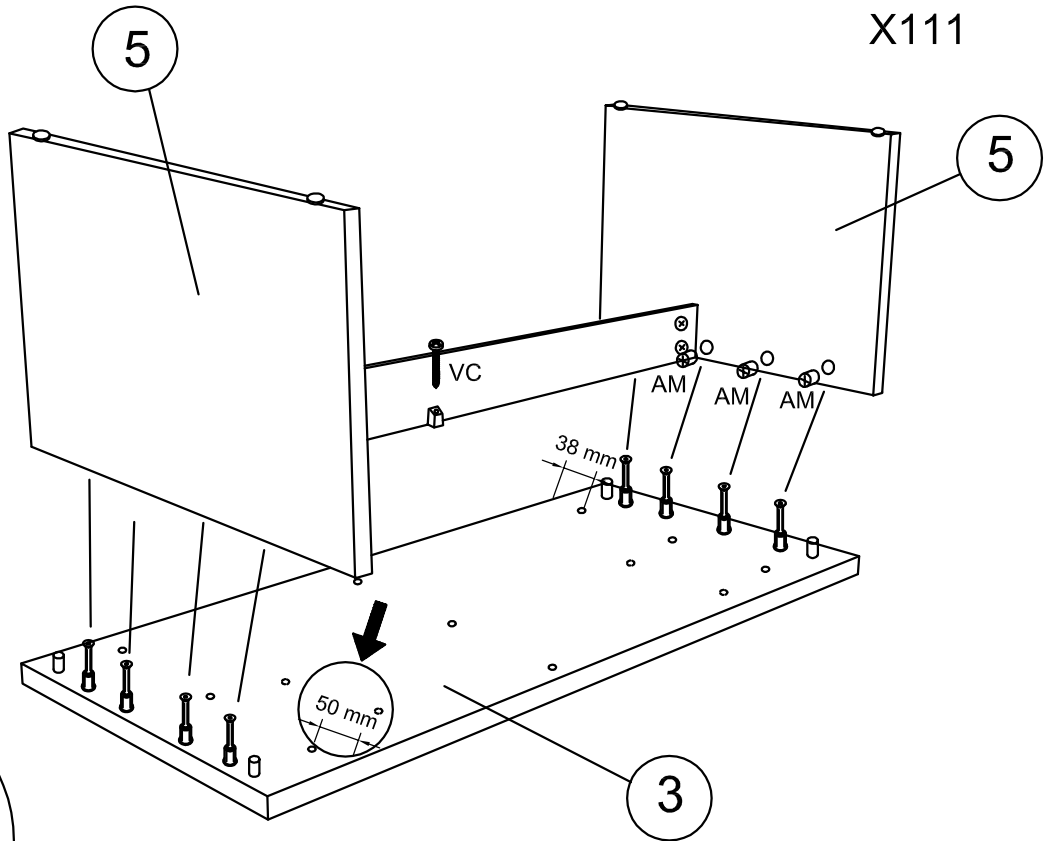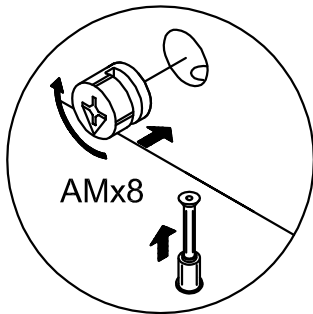
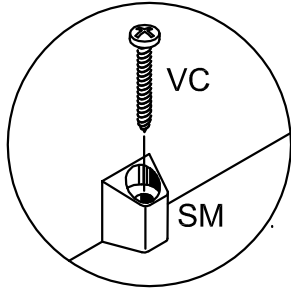


5

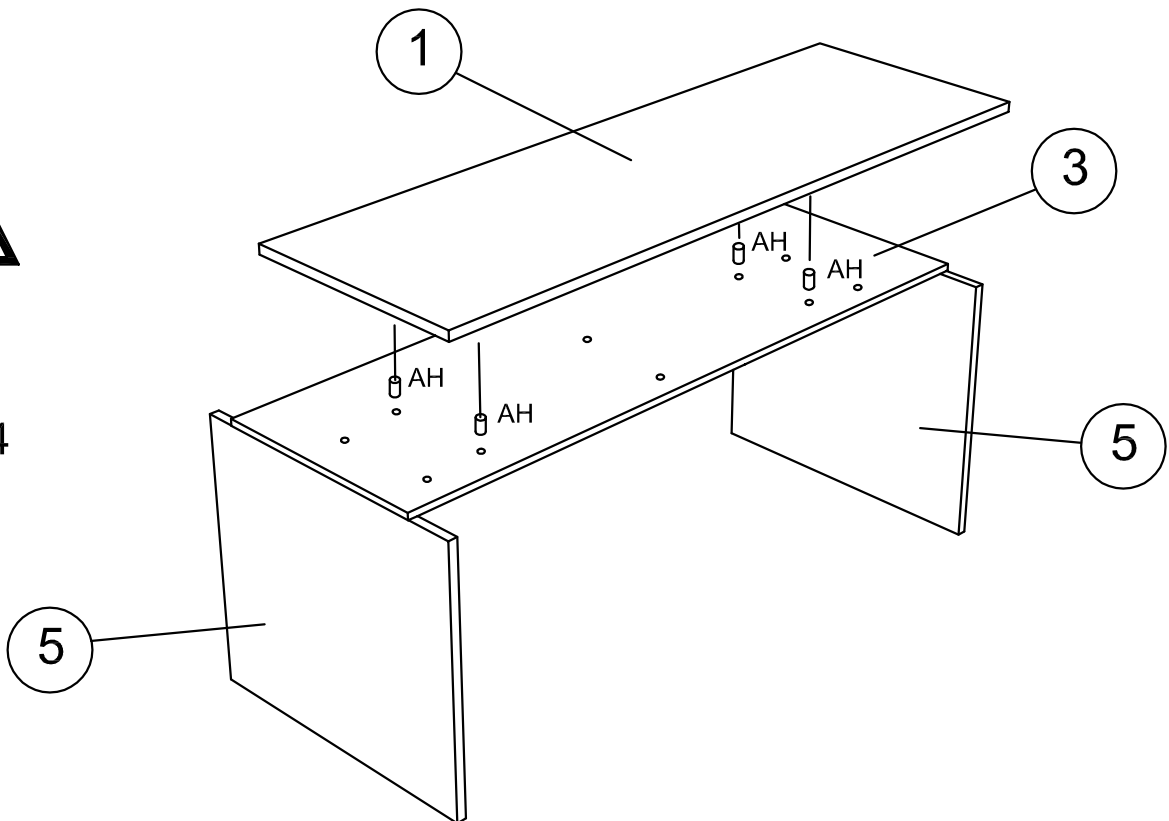

6

X111

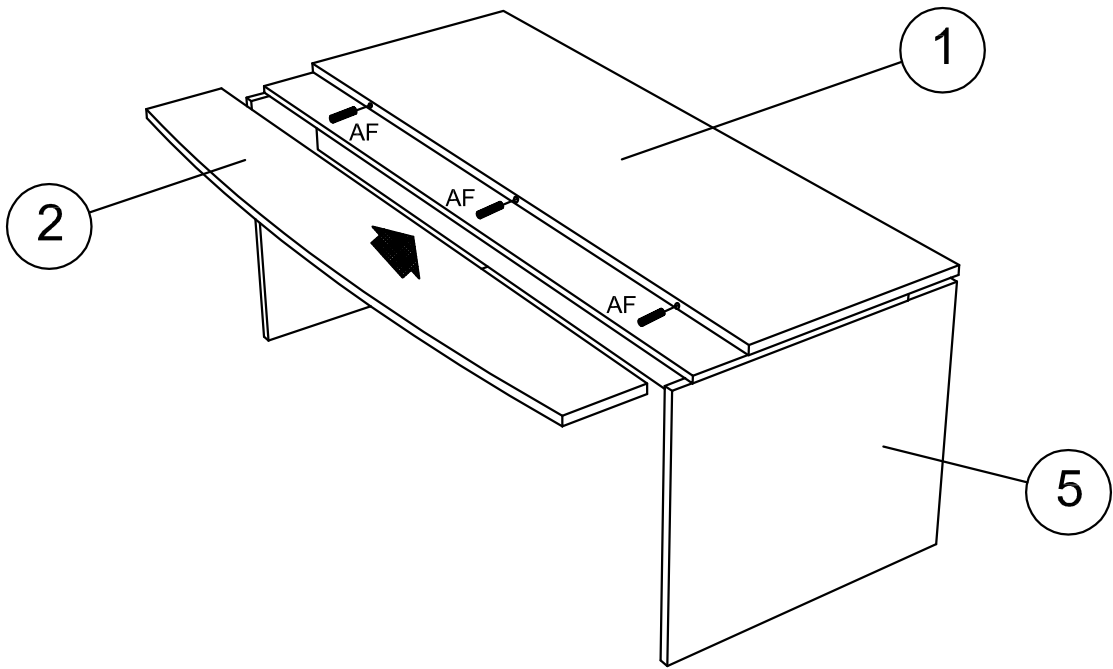

7

